

LEG TENSIONING

TRIAD articulating legs are adjustable and replaceable in the field. Each leg is secured with a large Hex Bolt (A). This bolt also adjusts the tensioning of the leg. Hex bolt (A) is locked in place by a smaller Set Screw (B). To adjust or replace the leg, 1.) loosen set screw (B) with the 3mm Hex Wrench (included) and 2.) adjust or remove hex bolt (A) with the 6mm Hex Wrench (turn clockwise to tighten or turn counter-clockwise to loosen). Re-tighten the set screw before testing the tension.

