



Triad-Orbit Quick-Change Coupler

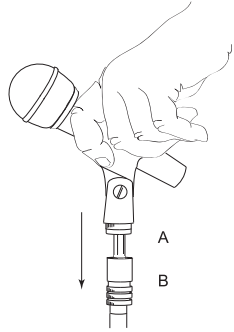

IO Insertion

The TRIAD-ORBIT IO Quick-Change Coupler consists of two parts: (A) IO Hex Head "IO-H" and (B) IO Coupler Body. To insert any IO-equipped device (boom arm, mic adapter, tablet holder, etc.), simply align the IO Hex Head with the IO Coupler Body and insert the device. IO-equipped devices are automatically locked in place when the IO hex shaft is fully inserted.

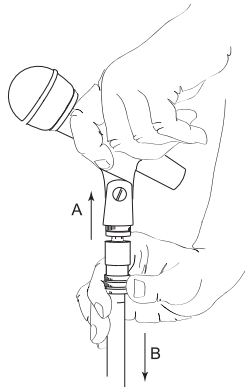

IO Release

To remove a device from a IO Quick-Change Coupler, Pull down the Release Sleeve (B) on the IO Coupler Body, and then pull the IO-equipped device (A) away from the IO Coupler Body.

IO-S6 Installation

- Remove the ABS covers and the square to expose the S6 "Back foot"
- Slide the IO-S6 into the open Back Foot slot. Use the supplied screws to secure it in place.

